
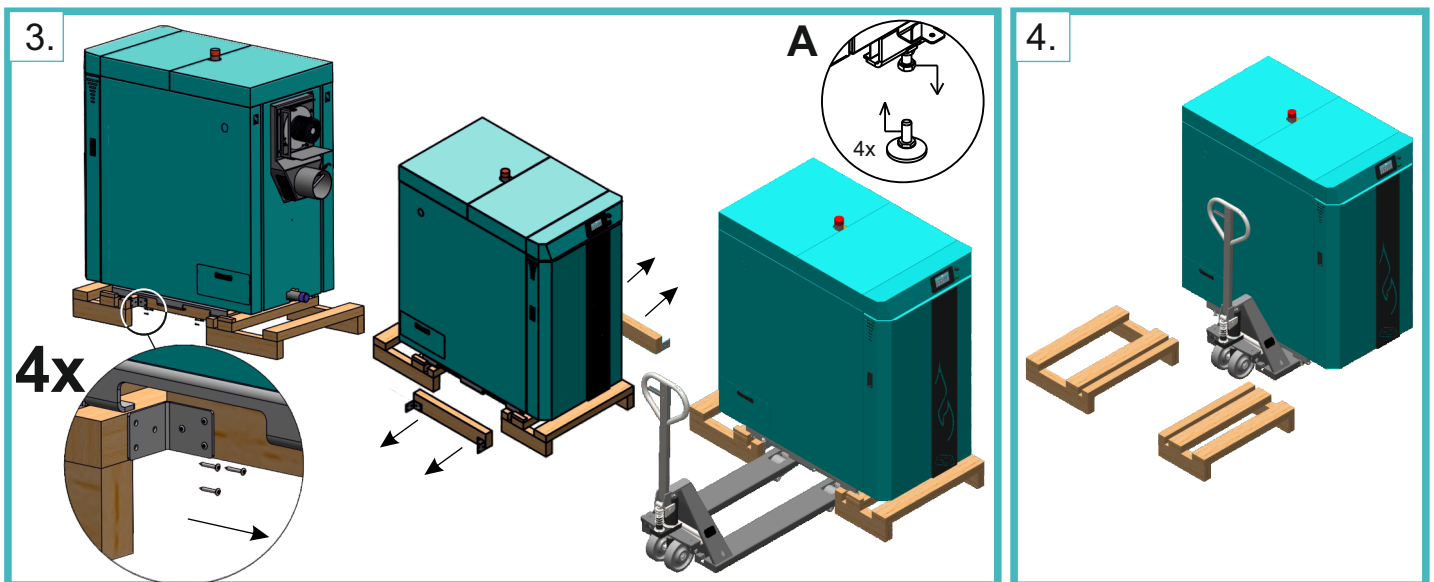
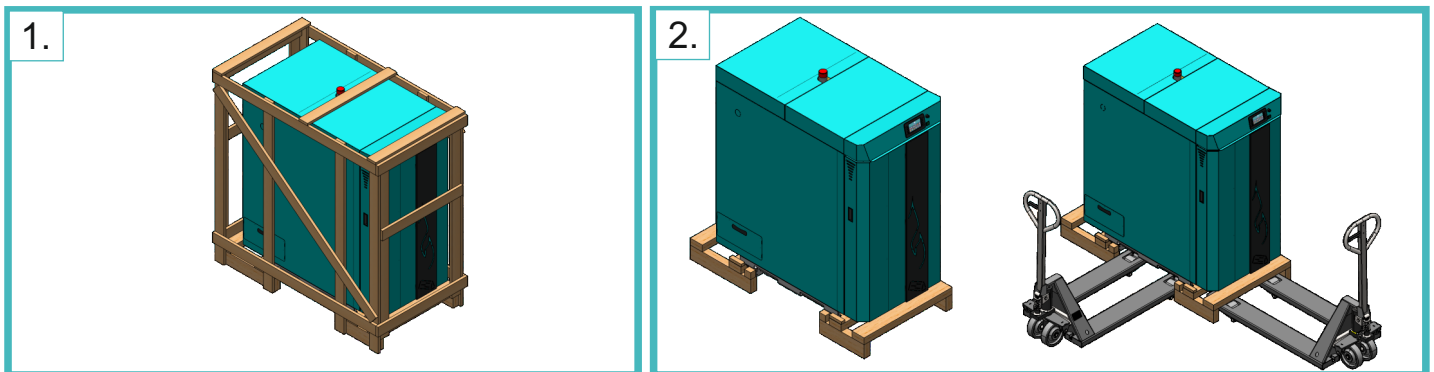


Centrometal

HEATING TECHNIQUE

BioTec-C / BioTec-L - place the boiler on the installation site

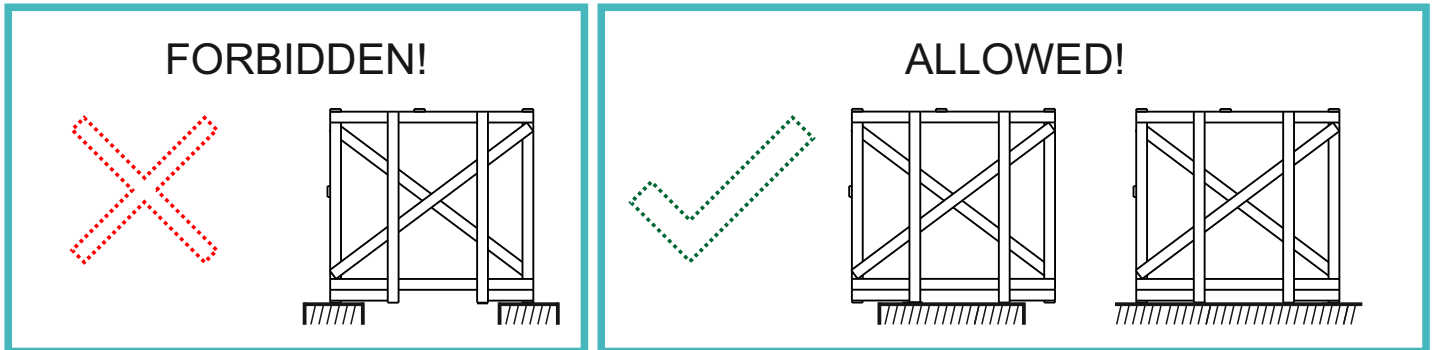

1. The boiler is supplied on a wooden stand (pedestal) protected by a wooden box and PVC foil. The wood box and the PVC foil must be removed before/when placing the boiler to the position of installation.
2. After removing the wooden box and the PVC foil, leave the boiler on a wooden stand (pedestal) (possible manipulation of the boiler to the installation site with a manual forklift from the side or front). (25 kW – 1 fork, 31/34/35/45 – 2 forks)
3. Unscrew the screws that hold the bracket and the crossbar of the wooden stand (pedestal). Remove the wooden stand (pedestal) to place the hand forklift under the boiler on the side and separate the boiler and the wooden stand (pedestal). Slightly lift the boiler with a hand forklift so that it can be possible to remove the wooden stand (pedestal) (mandatory, the boiler 25 kW has to be supported (take care of the boiler) by the other person all the time from the start to the end of the boiler lifting (including the manipulation and moving wooden parts)). Remove the existing legs (screws) and put the legs (screws) with plastic foot (A) that came with the boiler in the plastic bag.
4. Place the boiler to the position of installation and slightly lower it to the floor. Remove the hand forklift.
5. Level the boiler using the 4 legs (screws) with plastic foot that you have fitted to the boiler stand.